

## Hybrid System

Your vehicle is a hybrid vehicle. It has characteristics different from conventional vehicles. Be sure you are closely familiar with the characteristics of your vehicles, and operate with care. The hybrid system combines a gasoline engine and an electric motor (traction motor) according to driving conditions, improving fuel efficiency and reducing exhaust emissions. For details, refer to the "Owner's Manual".

### n Hybrid System Indicator



Displays the output and regeneration level of the hybrid system.

- 1 By keeping the indicator within the Eco area, more fuel-efficient driving can be achieved.
- 1 The Charge area indicates regeneration status.

### n Regenerative braking

The motor generator converts kinetic energy to electric energy when:

- 1 The accelerator pedal is released.
- 1 The brake pedal is depressed with the shift lever in D or S.

### n Sounds and vibrations specific to a hybrid vehicle

There may be no engine sounds or vibrations even though the vehicle is able to move. Always put the shift lever in P when parked.

The following sounds or vibrations may occur when the hybrid system is operating, and are not a malfunction:

- 1 Motor sounds may be heard from the engine compartment.
- 1 Sounds may be heard from the hybrid battery (traction battery) under the rear seat when the hybrid system starts or stops.
- 1 Sounds from the hybrid system may be heard when the back door is open.
- 1 Sounds may be heard from the hybrid transmission when the engine is started or stopped, or while the engine is idling.
- 1 Engine sounds may be heard when accelerating sharply.
- 1 Sounds may be heard due to regenerative braking when the brake pedal is depressed and accelerator is loosened.
- 1 Vibrations may be felt when the gasoline engine starts or stops.
- 1 Cooling fan sounds may be heard from the air intake vents under the rear seat.

## Energy Monitor / Consumption Screens

You can view the status of your hybrid system on the multi-information display and the Navigation system screen.

### n Energy monitor


The energy monitor can be displayed on both the Navigation system screen and the multi-information display.

- How to display on the Navigation system screen (→P.28):

Press the “MENU” button, and select




after that select

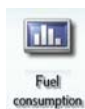

If the **Consumption** or **Past Record** screen is displayed, select the **Energy** and push the “ENTER” button.

- How to display on the multi-information display:

Toggle the “ENTER” switch on the steering wheel upward or downward through several items to select the energy monitor display.

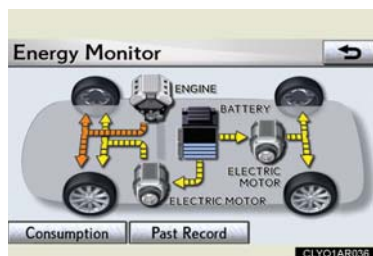

- The flow of energy is displayed on the Navigation system screen. (The rear electric motor is equipped AWD models only.)

Amber: gasoline energy

Yellow: electrical energy

Green: energy recovery

A green arrow appears when regenerative braking occurs.





- The flow of energy is indicated by the movement of the arrows on the multi-information display.


- The battery display acts as an 9-step indicator of the hybrid battery level.

The displayed energy flow, battery level, etc. will change in response to the current driving conditions.

## n Consumption (with navigation system)



Press the "MENU" button and select , after that select  and push the "ENTER".

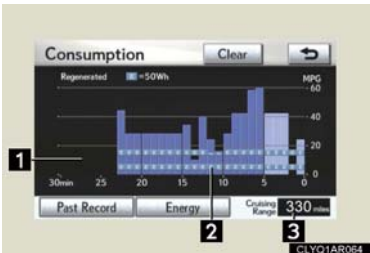If the **Consumption** screen does not appear, select the **Consumption** and push the "ENTER" button.




- 1 Fuel consumption in the past 30 minutes
- 2 Regenerated energy in the past 30 minutes  
One symbol indicates 50 Wh. Up to 4 symbols are shown.
- 3 Cruising range

## n Past record (with navigation system)

Press the "MENU" button and select , after that select  and push the "ENTER".

If the **Past Record** screen does not appear, select the **Past Record** and push the "ENTER" button.

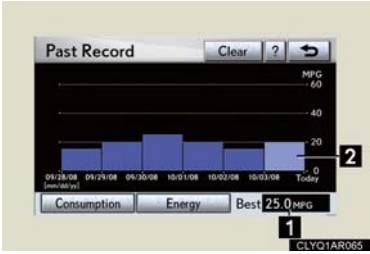

- 1 Best past fuel consumption
- 2 Average fuel consumption

## n Hybrid warning message

A message is automatically shown when a malfunction occurs in the hybrid system or an improper operation is attempted.



If a warning message is shown on the multi-information display, read the message and follow the instructions.